

D-Link PPPoE Configuration

These steps will help you configure your D-Link Router.

1. Open up your Web Browser. In the address bar, type in 192.168.0.1. Press Enter.




2. You will now be prompted for your username and password. If you have configured a username and password for your router, enter it now. If you have not, type in admin in the username field, and leave the password blank.



3. The main menu of the router will now be displayed. Click ONCE on the WAN button.



4. In the WAN menu, choose the radio button PPPoE. This will cause a new menu to come up. The PPP over Ethernet menu will now be displayed. You will need to enter the Connection Username and Password, e.g. Username: 6046381818@pppoe.net, Password: **V6X4J7**

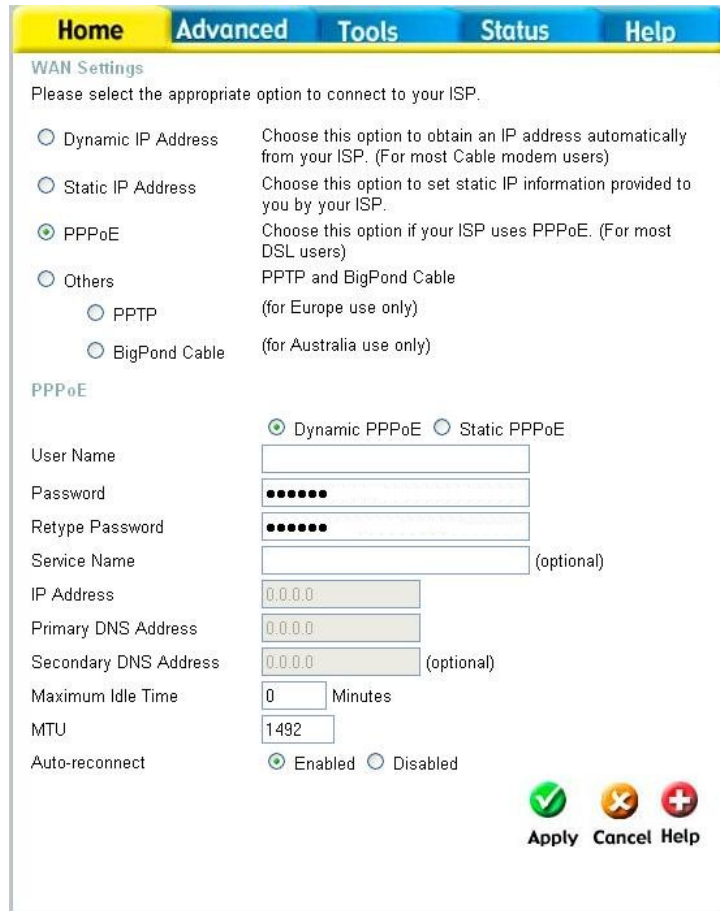

Home Advanced Tools Status Help

WAN Settings

Please select the appropriate option to connect to your ISP.

Dynamic IP Address Choose this option to obtain an IP address automatically from your ISP. (For most Cable modem users)

Static IP Address Choose this option to set static IP information provided to you by your ISP.

PPPoE Choose this option if your ISP uses PPPoE. (For most DSL users)

Others PPTP and BigPond Cable

PPTP (for Europe use only)

BigPond Cable (for Australia use only)

PPPoE

Dynamic PPPoE Static PPPoE

User Name

Password

Retype Password

Service Name (optional)

IP Address

Primary DNS Address

Secondary DNS Address (optional)

Maximum Idle Time Minutes

MTU

Auto-reconnect Enabled Disabled

Apply **Cancel** **Help**

5. Next, Click Apply to save the changes. The router will now restart and you will need to click on Continue to finalize the changes.



Thank you for using services from eSeeLYNX Communication Ltd.
Automated Phone Support available at 604-638-1818, press 2
Other enquiries please contact:
For Account Information, 604-638-1818 ext. #1100
For Technical Support, 604-638-1818 ext. #1140